

Model KD-ATL-RCM05 Automatic Disc Loader Instructions



Installation

On the KD-CLN-LP200 ultrasonic cleaner, locate the hex screw circled in the left photo. Remove this screw from the front panel.

Carefully place the auto-loader onto the LP cleaner. Temporarily hold the auto-loader in place to prevent it from falling off.



While holding the auto-loader, secure it with the included thumb screw.

Push the screw through the opening of the auto-loader and into the absent hex screw location in the front panel. Gently tighten by hand.


Connect the included cable from the "AUX. POWER" plug on the rear of the LP cleaner to the auto-loader's side plug.



Usage

The auto-loader has 5 disc slots. Each LP is added to the device by carefully placing the left-side edge into the loading arm groove, then hanging the spindle hole onto the metal peg.

Be careful that each disc is properly in the arm groove, or it could fall off or become damaged when the device moves.

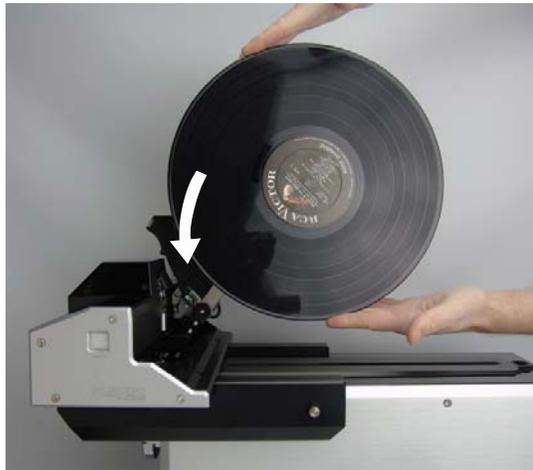

Discs can be added to the auto-loader in the following states:

- 1) When the ultrasonic LP cleaner is powered off.
- 2) When the auto-loader is stopped via its "START/STOP" button (this can be activated at any time).
- 3) When another LP disc is in the middle of being cleaned or dried.

NOTE: Do not add or remove LP discs while the auto-loader is moving. Damage to the device or the LP disc could result. For this reason, it is safest to stop the auto-loader before changing discs by pushing the "START/STOP" button.



Auto-loader START/STOP Button

The auto-loader remembers which discs have already been cleaned. Each loading arm displays this status with an LED: Red for dirty, and Green for clean.

Discs which are green can be removed and replaced with dirty discs, but it is recommended to stop the unit first by pushing its "START/STOP" button. After exchanging discs, press the button again to continue.

